


b·hyve



# B-HYVE XD BLUETOOTH® HOSE FAUCET TIMER

## QUICK START GUIDE

HT32BT

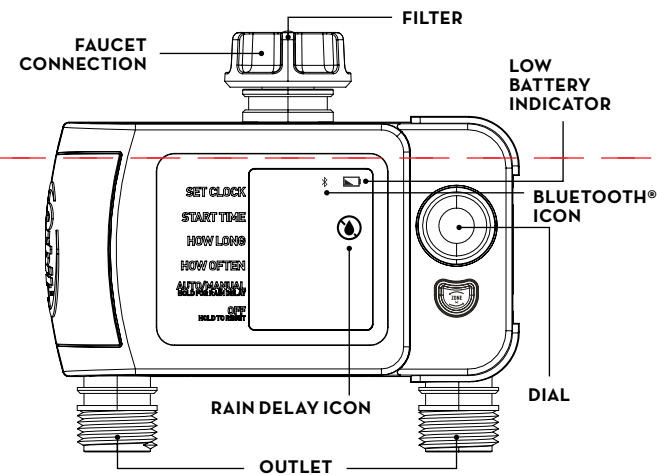

Write down the MAC address: 12 digit alphanumeric code located on the bottom of the timer.

Timer MAC Address: \_ \_ : \_ \_ : \_ \_ : \_ \_ : \_ \_

### Installing the Batteries

Insert two AA (1.5V) alkaline batteries (not included) and replace the tray.

Note: Firmly replace the battery tray to ensure water resistance and increase battery life. You will know the battery tray is fully inserted if it does not pull out easily.

**i** Replace batteries when low battery icon appears on display.

**⚠** Used up or dead batteries must be removed from the timer and disposed of properly. Do not dispose of batteries in fire. Batteries may explode or leak. Remove batteries when storing timer.

## PROGRAMMING THE TIMER WITH BLUETOOTH®

### Open the B-hyve® App

Log into your B-hyve account and tap “My B-hyve”. Go to “devices” then “add device”. Select the B-hyve XD timer with two outlets. The app will walk you through the rest of the process.




**i** For new users, search apps for “B-hyve” and download the free Android or iOS app. Create an account to begin setup.

**i** The Bluetooth® icon on the display should be flashing indicating the timer is in pairing mode.

**i** If at any time you need to re-pair or do a factory reset, turn the dial so the arrow is pointing to OFF, press and hold the dial for 5 seconds.

Note: Your LCD will show Lock Icon to indicate that the timer is using the B-hyve app to program your timer.

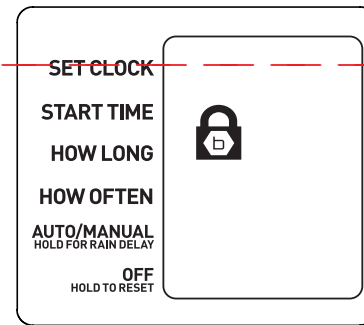

Note: When the display shows a full screen of symbols release the dial. The display will show 12:00pm in the AUTO/MANUAL mode verifying the reset has been completed. Resetting the timer will erase all programs and it will have to be reprogrammed to your desired watering schedule.

## PROGRAMMING THE TIMER AT THE FAUCET

### Set Clock

1. Turn the dial so the arrow is pointing to SET CLOCK.
2. Press the dial to select, the hour will begin to flash.
3. Turn the dial until current hour is displayed including the correct AM or PM, then press dial to confirm. The minutes will begin to flash, indicating the next step.
4. Turn the dial until the current minutes are displayed, then press dial to confirm.

### Start Time

1. Turn the dial so the arrow is pointing to START TIME.
2. Zone [1] is automatically selected (noted by the box around it.)
3. Press the dial to select, the hour will begin to flash.
4. Turn the dial until the desired start time hour is displayed including the correct AM or PM, then press dial to confirm. The minutes will begin to flash, indicating the next step.
5. Turn the dial until the desired minutes are displayed, then press dial to confirm.

### How Long

1. Turn the dial so the arrow is pointing to HOW LONG, zone [1] is automatically selected.
2. Press the dial to select, the minutes will begin to flash.
3. Turn the dial until the desired number of minutes are displayed. Select between 1 to 360 minutes then press dial to confirm

### How Often

1. Turn the dial so the arrow is pointing to HOW OFTEN, zone [1] is automatically selected.
2. Press the dial to select, the number will begin to flash.
3. Turn the dial until the desired number of hours or days is displayed, then press to confirm. You may choose to water every 1 hour, 3 hours, 6 hours, 12 hours, or from 1 to 7 days.

Note: 1 is every day, 2 is every other day, etc.

**Congratulations!**  
**Zone 1 is now programmed. Turn your dial to AUTO to allow your timer to water according to programmed time and frequency, or complete the steps to program zone 2.**

### Programming Zone 2

1. Turn the dial so the arrow is pointing to START TIME.
  2. Press the ZONE button to select zone [2], this will set Zone 2 as the default station.
  3. With Zone 2 now selected, repeat the steps for Start Time, How Long, and How Often.
- Congratulations!  
Zone 2 is now programmed. Turn your dial to AUTO to allow your timer to water according to programmed time and frequency.

more information on back

|                         |   |               |  |   |  |  |  |  |
|-------------------------|---|---------------|--|---|--|--|--|--|
|                         | Orbit®<br>1-800-378-5555<br>orbitonline.com | <b>K</b>      | <input type="checkbox"/> Deline            | <input type="checkbox"/> Dim./<br>Cutaway | <input checked="" type="checkbox"/> Fold | <input type="checkbox"/> Product<br>Coverage | <input type="checkbox"/> Glue  | Printers are responsible<br>for meeting print<br>production requirements.<br>Any charges must be<br>reported by client.<br>Printed piece must meet<br>designated specifications<br>on this form. |
| DATE: 12/17/2020        | DESIGNER: QW                                | MARKETING: DC | <input type="checkbox"/> PMS<br>0000       | <input type="checkbox"/> PMS<br>0000      | <input type="checkbox"/> PMS<br>0000     | <input type="checkbox"/> PMS<br>0000         | PRINTERS ARE<br>REQUIRED TO REVIEW<br>ALL SPECIFICATIONS<br>PRE-COLOR. |  |
| ARTWORK N°: 24632-24 rA | SOFTWARE: Adobe Indesign CC                 |               | <input checked="" type="checkbox"/> Folded | <input type="checkbox"/> Flat             | Additional Information                   |  | <input checked="" type="checkbox"/>                                    | © 2020 Orbit Inc.<br>This work is the property<br>of Orbit®, and cannot<br>be used, reproduced or<br>distributed in any way<br>without their express<br>permission.                              |
| L: _ _ "                |   |               | W: 22.5"                                   |   |  |  |  |  |
| W: _ _ "                |   |               | H: 5.5"                                    |   |  |  |  |  |
| H: _ _ "                |   |               |  |   |  |  |  |  |

## ADDITIONAL FEATURES

### Rain Delay

Rain delay allows you to postpone watering for a set period of time. To access the rain delay, follow the steps below.

1. With the timer in the AUTO/MANUAL mode, press and hold the dial for 3 seconds.
2. The rain delay symbol will appear and the number of days will begin to flash.
3. Turn the dial until the desired number of days is displayed, then press to confirm. You may select a delay of 12 hours, 24 hours, or from 2 to 7 days.
4. Screen will flash between clock and remaining time before programmed cycle resumes.

**i** To remove a rain delay, press and hold the dial for 3 seconds. The rain delay symbol will turn off and your timer will resume its programmed watering schedule.

### Manual/Hand Watering

This feature allows you to water without interrupting your set schedule. To access this feature, follow the steps below.

1. With the arrow pointing to AUTO/MANUAL, press the

- dial to select.
2. Manual will appear and minutes will begin to flash. Zone [1] is automatically selected, press ZONE button if you want to manually water from Zone [2]
  3. Turn the dial until the desired number of minutes are displayed. Select between 1 to 360 minutes then press dial to confirm.
  4. The manual icon will appear and the screen will flash between clock and time remaining before programmed cycle resumes.

Note: There may be a slight delay between the time the dial is pressed and when watering begins.

**i** To stop manual watering press the dial. The manual watering symbol will turn off and your timer will resume its programmed watering schedule.

**i** If the manual watering runs into the next scheduled event, the next watering event is canceled--manual watering takes priority.

### Timer

Range: 150 ft without interference  
Pressure Operating Range: 10-100 PSI  
Temperature Operating Range:  
35°F-122°F (2-50°C)  
For Outdoor Use With Cold Water Only  
Not For Use With Appliances

### FCC Statement: FCC ID: ML6-HT32BT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Warning:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**This device meets the FCC and IC requirements for RF exposure in public or controlled environments. The end user is advised to maintain a distance 20 cm from the timer and any personnel to ensure compliance with RF exposure regulations.**

### IC Statement: IC: 3330A-HT32BT

This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept

any interference received, including interference that may cause undesired operation. This Class B digital apparatus complies with Canadian ICES-003.

**Remarque:** cet appareil été testé et déclaré conforme aux limites d'exposition pour les appareils numériques de classe B, selon la section 15 de la Règlementation de la FCC. Ces limites sont conçus pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet appareil produit, utilise et peut émettre de l'énergie radio fréquence et, si elle n'est pas installée et utilisée conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'est pas garantie que des interférences ne se produisent pas dans une installation particulière. Si cet appareil cause des interférences gênantes à la réception d'un signal radio ou de télévision, ce qui peut être déterminé en allumant et en éteignant l'appareil, l'utilisateur peut corriger les interférences en suivant une des mesures suivantes :

- Réorientez ou repositionnez l'antenne de réception.
- Augmentez la distance entre l'appareil et le récepteur.
- Branchez l'appareil dans une prise sur un circuit différent du circuit sur lequel le récepteur est branché.
- Consulter le revendeur ou un technicien radio/TV expérimenté pour obtenir l'aide.

**Cet appareil est conforme aux exigences de la FCC et de l'IC concernant l'exposition aux ondes dans un environnement public ou contrôlé. Il est conseillé à l'utilisateur final de maintenir une distance de 20 cm du contrôleur pour assurer la conformité aux réglementations d'exposition RF.**

### Information de conformité pour le Canada Déclaration de l'IC :

Cet appareil est conforme à la norme RSS d'Industry Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences nuisibles, et (2) cet appareil doit tolérer toutes les interférences, dont les interférences pouvant causer un fonctionnement non désiré. Cet appareil numérique de classe B est conforme à la norme canadienne ICES-003.

### Need Help?

If you encounter a problem, please use the following resources before retuning your B-hyve to the store.

Scan the QR Code to access the help page online.



**text us**  
801-905-8260



**email us**  
support@orbitbhyve.com



**call us**  
1-801-299-5555



or visit us at:



You are here

A B-hyve Wi-Fi Hub connection gives you control from anywhere



Purchase the B-hyve Wi-Fi Hub online or at your local retailer  
PN # 21027